



Part numbers: UCCPU-C130, UCCPD-C130, UCCAD-C130

© Panduit Corp. 2018

## **INSTALLATION INSTRUCTIONS**

**XXXXX** 

## 1. Description:


This universal edge clip provide 1 to 2 PV(Photovoltaic) cables routing/management for solar farm or general cabling applications.

### 2. Notice:


Latch releasing will have a chance to damage the components, please be careful. Don't reuse when it's damaged.

# 3. Installation Method I (recommended):

1.1 Press the edge clip toward the panel opening edge.

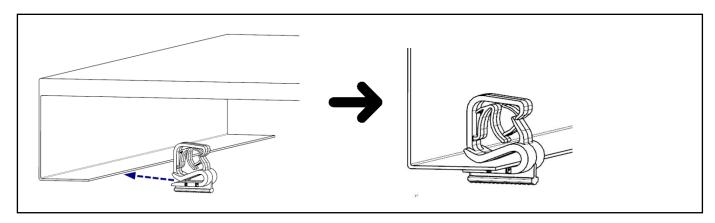

1.2 Insert the latch from the **back side** and secure the main clip to the panel

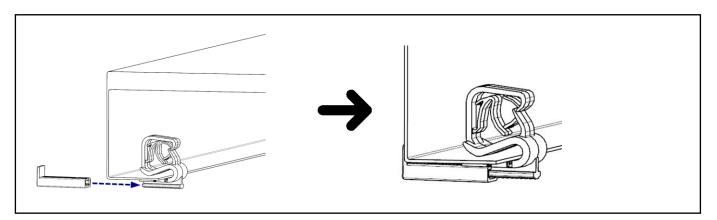

1.3 Press the cable in and it will be clamped.

For Technical Support: www.panduit.com/resources/install\_maintain.asp





Part numbers: UCCPU-C130, UCCPD-C130, UCCAD-C130


© Panduit Corp. 2018

INSTALLATION INSTRUCTIONS


XXXXX

### 2. Installation Method II:

2.1 Pre-assemble the main clip and the latch only 1 or 2 teeth by hearing 1 or 2 "clicking" sound.

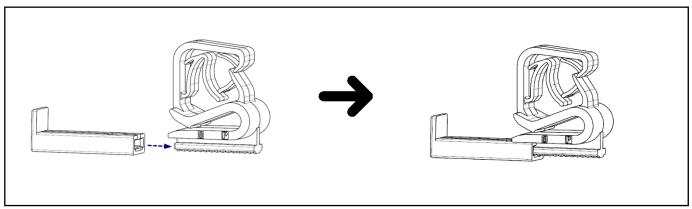

2.2 Press the pre-assembly toward the panel edge, and tighten the latch.

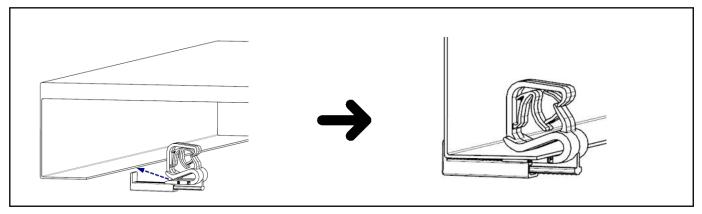

2.3 Press the cable in and it will be clmaped.


For Technical Support: www.panduit.com/resources/install\_maintain.asp






Part numbers: UCCPU-C130, UCCPD-C130, UCCAD-C130

© Panduit Corp. 2018 INSTALLATION INSTRUCTIONS XXXXX

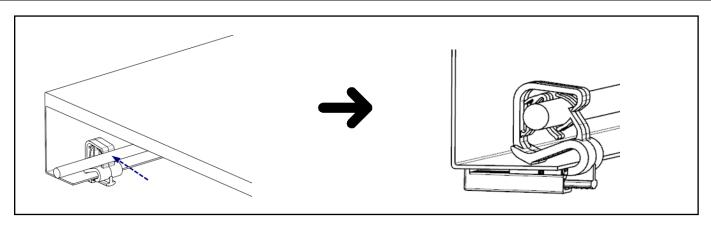


# 3. Work In Cabling System:


3.1 Cable fixed under the panel

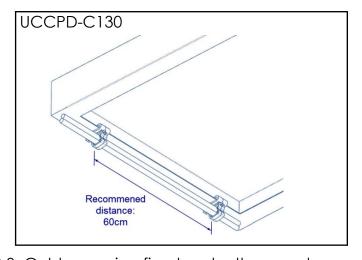


3.3 Cable crossing fixed under the panels

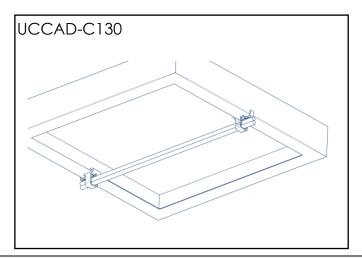

3.2 Cable fixed inside the panel

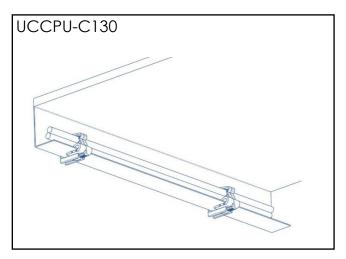

3.4 Similar installation method for other types

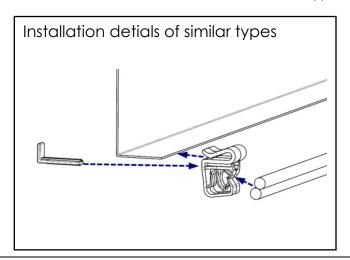

For Technical Support: www.panduit.com/resources/install\_maintain.asp

Page 3 of 3

FORM: H2-2642C DATE: 01JAN18 APPR:TSB REF PROC:. H1-1954